



REPLACEABLE TEETH

HOW TO INSTALL YOUR NEW TEETH

- 1** For safety, tag out the machine and put on your safety boots and glasses. You will need a hammer, a wire bristle brush, a pin removal tool, and the new teeth you wish to install.
- 2** Your bucket, ripper, or rake should be positioned with its teeth parallel to the ground.
- 3** On the retainer side of the tooth, drive the pin removal tool into the pin, pushing it toward the opposite side of the tooth.
- 4** After taking the tooth off, clean up the adapter with a wire bristle brush.
- 5** Insert the retainer into the adapter and slide the new tooth over the adapter.
- 6** Insert the pin through the tooth and adapter from the side opposite the retainer.
- 7** Hammer the pin until it is flush with the side of the tooth.
- 8** Check that the pin is locked in place.

